

DS620 iSerial Enable Tool

The DS620 iSerial Enable Tool is used to enable the iSerial functionality within the DS620 printer firmware. This facilitates proper functionality with the Mac driver for OS-X 10.9.4 and later.

Enabling iSerial Functionality

To enable the iSerial functionality with your DS620 printers:

1. Connect and turn your DS620 printer(s) on.




Attention

Your printer(s) must be powered on for the tool to recognize/update them. The iSerial Enable Tool can recognize up to five (5) DS620 printers simultaneously. You may use the iSerial Enable Tool with or without having the Mac driver installed.


2. Unzip the iSerial Enable Tool.



3. Once unzipped, double-click the tool's icon.
4. Upon opening, the tool is populated with information associated with your printers, including the USB Serial Number of your DS620 printer(s) and whether the iSerial functionality is enabled/disabled. The USB Serial Number will not appear if the iSerial functionality is not enabled.

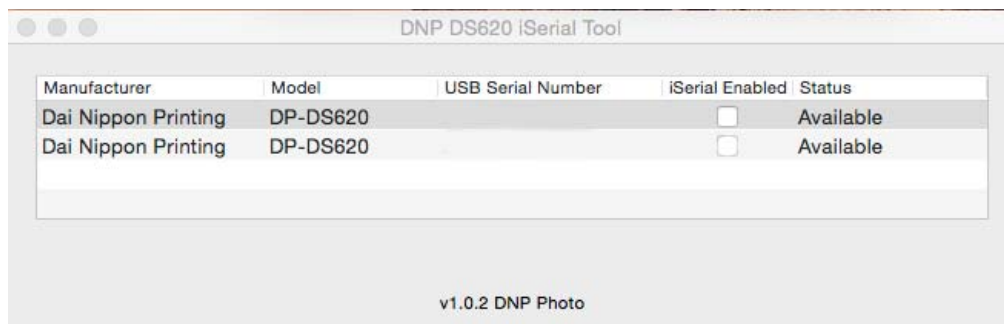


5. If your printers are not already enabled, select the **iSerial Enabled** checkbox for each printer.

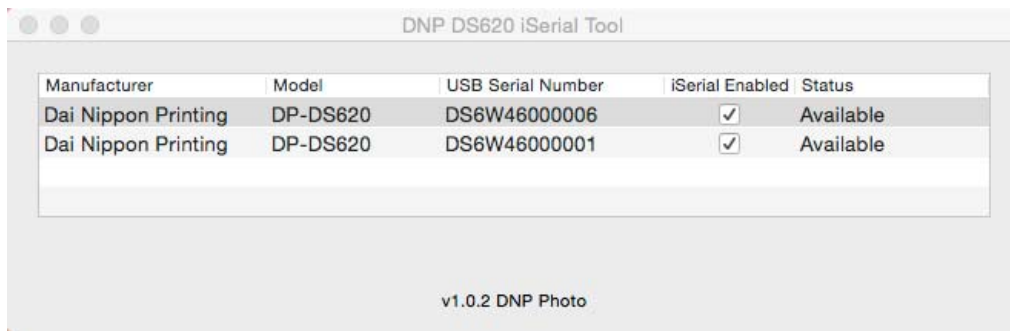**Note**

Before selecting the **iSerial Enabled** checkbox, your printer(s) must be available, i.e. not printing images, etc. To verify that your printer is available, check the **Status** column in the iSerial Enable Tool.

6. Upon selecting the **iSerial Enabled** checkbox, you are prompted to reboot your printer(s). Turn your DS620 printer off, and then turn it back on. Then click **OK** on the dialog box.

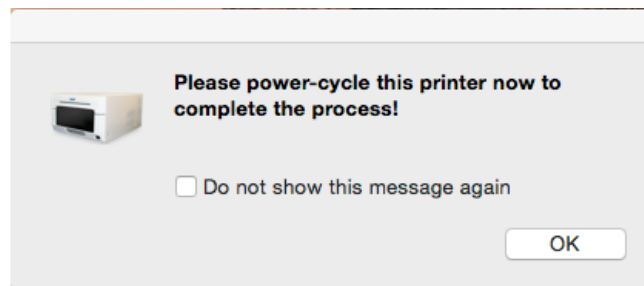

7. Repeat steps 5 and 6 for each printer.

**Note**

If you deselect the **iSerial Enabled** checkbox, the iSerial functionality is disabled for the associated printer.

8. Once the appropriate changes have been made, close the iSerial Enable Tool before sending images to the printers.